



- **APPLICATION NOTE**

- 

- 

- ***CAN APPLICATIONS WITH***

- ***STEPPIII OR FOX DEVICE***

## VERSION HISTORY:

*This table provides a summary of the document revisions.*

Version	Author	Changes	Last modified
		-	
1.0.3	F. Beqiri	- Added hint in chapter <a href="#">1.2</a>	03/06/2010
1.0.2	F. Beqiri	- Improved Figure 1 - typical High & Low signals on CANBus. - Added more information about the CAN Bus throughout this document	19/01/2009
1.0.1	F. Beqiri	- Corrected color codes of "Vehicle installation cable" - see table in <a href="#">page 8</a>	18/06/2008
1.0.0	F. Beqiri	- Initial version	04/09/2008

**TABLE OF CONTENTS**

**1 ABOUT THIS DOCUMENT.....5**  
1.1 Introduction.....5  
1.2 How to read the data out of a CAN bus.....7

## CAUTIONS

Information furnished herein by FALCOM is believed to be accurate and reliable. However, no responsibility is assumed for its use. Please, read carefully the safety precautions.

If you have any technical questions regarding this document or the product described in it, please contact your vendor.

General information about FALCOM and its range of products are available at the following Internet address: <http://www.falcom.de/>

## TRADEMARKS

Some mentioned products are registered trademarks of their respective companies.

## COPYRIGHT

This document is copyrighted by **FALCOM WIRELESS COMMUNICATIONS GmbH** with all rights reserved. No part of this documentation may be produced in any form without the prior written permission of **FALCOM WIRELESS COMMUNICATIONS GmbH**.

## FALCOM WIRELESS COMMUNICATIONS GMBH.

No patent liability is assumed with respect to the use of the information contained herein.

## NOTE

Specifications and information given in this document are subject to change by FALCOM without notice.

# 1 ABOUT THIS DOCUMENT

This application note provides information how to connect your device with CAN Bus option to an external CAN bus and read the data on a CAN bus. The CAN bus can be a vehicle CAN bus on a car or truck. *STEPPIII device is used as an example in this application note.*

Main feature of the *STEPPIII* and *FOX* with CAN bus option is that they directly store received messages with selected CAN message identifiers into a message buffer. The user provides a list of CAN message identifiers that should be received by the CAN interface. The *STEPPIII* or *FOX* device automatically scans every incoming CAN message from the CAN bus and when there is an identifier match, the message is copied into the associated receive buffer. The user provides then the position of bits and bytes to be read out of the 8-byte data the identifier provides for finding out states of specific components in-vehicle (e.g. when the doors are locked or opened). The read out values are then stored into different storage slots and when a storage slot changes its value the corresponding event is occurred. With the help of such events you are able to sent these values to a TCP server for evaluating. Starting from the software revision **2.6.1**, the *STEPPIII* and *FOX* devices have a limit of 25 such storage slots. That means *STEPPIII* and *FOX* can catch up to 25 messages identifiers from the CAN bus stream.

## 1.1 Introduction

Controller Area Network (CAN) was initially created for automotive applications. The goal was to make automobiles more reliable and safe. The aim of this application note is to explain some of the basics of CAN and show how to configure your *STEPPIII/FOX* to read out specific information on the CAN bus. The CAN bus consists of two-wire data line to which all vehicle components are connected. CAN implements a serial data transmission using the two bus signal levels *CAN\_High* and *CAN\_Low*. CAN, like most modern networks, is serial based. This means that the information travels along the CAN Bus one bit at a time. On the *CAN\_High* a redundant signal is transferred which is inverted compared to *CAN\_Low* line (see figure below). When *CAN\_High* goes high, in the same time, *CAN\_Low* goes low, in the same proportion.

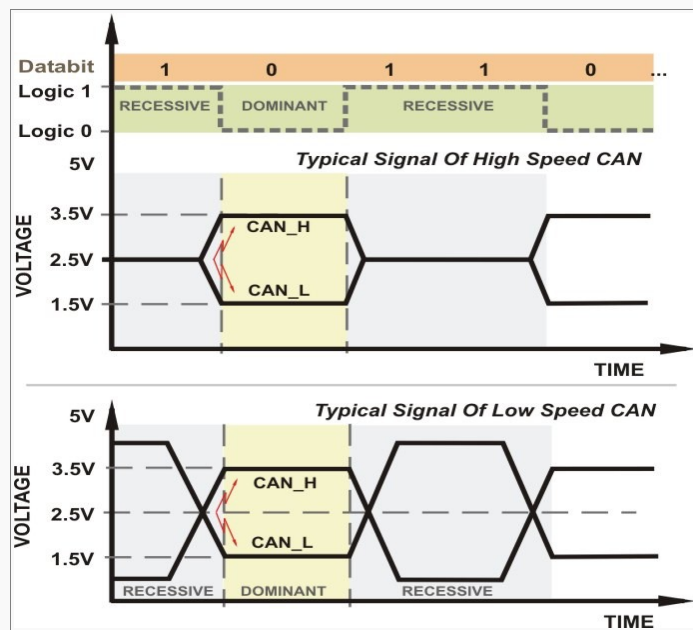


Figure 1: Typical signal of High & Low speed CAN.


The figure above shows the physical (dominant and recessive) levels with a CAN High and Low speed Transceivers. It is important to know that the voltage levels from each of the two CAN lines to ground or to the vehicle chassis are not the important ones. Important to CAN is the voltage between the two lines or their difference voltage. The recessive bus level (logic "1") is characterized by a difference voltage of 0 V. Both communication lines are on the potential voltage of 2.5 V. With the dominant bus level (logic "0") the CAN\_H line accepts a potential voltage of 3.5 V and the CAN\_L line of 1.5 V. The difference voltage is 2 V.

Each automotive manufacturer has created his own CAN Protocol. A CAN bus protocol consists of an identifier and up to eight data bytes. The protocol developed by a manufacturer defines what data signals they add to an identifier and how the signal data is organised within the data bytes for each CAN message. The CAN bus connection point on your vehicle can be either behind the radio or under the dashboard. For more information, how to get the identifiers on your vehicle CAN bus and how the data is organised in it as well as the CAN connection point please contact your vehicle manufacturer or your local vendor.


There are two different CAN messages: the standard and the extended message. The only difference between them is that the standard message supports an 11-bits identifier, and the extended one supports a 29-bits identifier, made up of the 11-bit identifier and an 18-bit extension identifier. The distinction between CAN standard and CAN extended is made by using the IDE bit, which is transmitted as dominant in case of an 11-bit message, and transmitted as recessive in case of a 29-bit message. A CAN that supports extended messages are also able to send and receive messages in CAN standard.

The structure of both 11-bits and 29-bits messages is given below:

**11 Bit Identifier:**



**29 Bit Identifier:**



SRR -Substitute RTR bit for 29 bit ID IDE - Identifier Extension (dominant =11 bit ID, recessive = 29 bit ID)

A simplified structure of a CAN bus message is shown in table that follow with example identifier and data. In this example, the identifier is a 11-bits identifier with a value of hexadecimal 0x1AC. For example, the 4<sup>th</sup> and 5<sup>th</sup> data bytes correspond to engine RPM (Revolutions Per Minute), while the 1<sup>th</sup> and 2<sup>th</sup> data bytes correspond to door lock etc..

	Identifier segment	Data segment							
		0 to 7 bytes							
<b>Example 11 bits</b>	<b>0x1AC</b>	F3	14	1F	99	75	F1	F2	F5
<b>Example 29 bits</b>	<b>0x0FC00860</b>	E1	23	AF	2	55	BC	C1	A1

For more detailed information about the CAN Bus, visit the website: [http://en.wikipedia.org/wiki/Controller\\_Area\\_Network](http://en.wikipedia.org/wiki/Controller_Area_Network).

## 1.2 How to read the data out of a CAN bus

For the evaluation of the CAN bus data, a FOX or STEPPIII device with the CAN bus option is required. These devices can be supplied (upon request) with a CAN-bus interface that supports either High-Speed CAN-Bus or Low-Speed CAN-Bus.

The first option **Low-Speed CAN-Bus controller CAN1** (Type TJA1054A) inside the FOX or STEPPIII device is compatible to:

- ✓ ISO 11898-3 (CAN fault-tolerant (low-speed)),
- ✓ Two transmission lines (total termination=100 Ohm across the CAN\_H and CAN\_L wire - should be measured\* at the end of the CAN bus lines in vehicle),
- ✓ SAE J2411 Single-wire CAN (SWC),
- ✓ Supporting a baudrate of up to 125 Kbit/s ,
- ✓ for car applications.

The second option **High-Speed CAN-Bus controller CANH** (Type TLE6250) inside the FOX or STEPPIII device is compatible to:

- ✓ ISO 11898-2 (high-speed)
- ✓ Two wire differential bus
- ✓ Characteristic line impedance 120 Ohm (a 120 ohm termination resistor at each end of the CAN bus. This will result in a resistance of about 60 ohms across the CAN\_H and CAN\_L wires if these resistors are installed),
- ✓ Supporting a baudrate of up to 1Mbit/s,
- ✓ for truck applications (CAN Gateway).

**Hint:** The first option (**Low-Speed CAN-Bus controller CAN1**) can also be used for one wire applications with up to 125 kbit/s bus speed and the second option (**High-Speed CAN-Bus controller CANH**) is designed for use in dual wire applications with up to 1Mbit/s bus speed.


Each of AVL devices provides two CAN bus signal pins CAN\_High and CAN\_Low. A cable shipped with the device can be used to interface your device with the CAN bus of your vehicle. The polarity of the CAN\_High and CAN\_Low lines must be observed when connecting your FOX/STEPPIII device to the two-wire CAN lines of your vehicle. Additionally, a manufacture special connector at the end of the shipped cable is required for connecting your FOX/STEPPIII to the CAN bus interface on your vehicle. Please contact your local vendor to get more information.

The CAN interface lines for STEPPIII and FOX:

STEPPIII	
DI0 (Pin 10 on the 16pin connector)	as CAN_H line
DI1 (PIN 12 on the 16pin connector)	as CAN_L line
FOX uses on the end of the 8-pin cable:	
I/O2 (Pin 5 - Yellow - on 8pin connector of cable)	as CAN_L line
I/O3 (Pin 6 - Green - on 8pin connector of cable)	as CAN_H line

The shipped 16-wires cable called "**Vehicle installation cable**" (for STEPPIII device only, while the FOX device provides an 8pin connector at the end of the external cable - for the pinout of this cable, refer to the "**FOX\_EvalKit\_Getting\_Started.pdf**"), which can be used for in-vehicle installation, has different color codes. Table below lists the wire colors and their meaning of this cable.

\* The vehicle key must be off to accurately measure the resistance of the CAN bus.

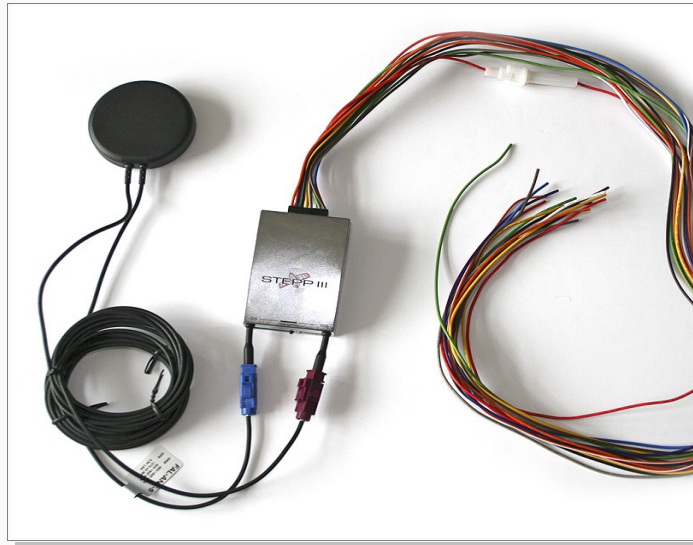

**Figure 2:** Vehicle mounting cable.

To use this cable, first strip off about 2 cm of the outer insulation the end of the wires your application uses, then connect the end with connector to the STEPP III device and finally, connect the other stripped ends DI0 (grey) to the *CAN\_High* and DI1 (white) to the *CAN\_Low* of the the CAN bus on your vehicle, and when you are sure the CAN connection is properly made, apply power to the device by connecting the *GND-pin* first and then *VCC-pin*.

The following table lists the color codes on the Vehicle mounting cable:

WIRE COLOR	NAME	Meaning
Orange - White	VBO	Do not use , leave disconnected.
Orange	IN0	Analog / digital Input ( <b>default = analog</b> )
Green - White	GND	-
Lilac	IN1	Analog / digital Input ( <b>default = analog</b> )
Brown - White	OUT0	Output
Black	IN2	Analog / digital Input ( <b>default = digital</b> )
Yellow - White	OUT1	Output
Yellow	IN3	Analog / digital Input ( <b>default = digital</b> )
Red - White	OUT2	Output
Grey	DI0	<b>CAN_H (dominant HIGH)</b>
Black - White	OUT3	Output
White	DI1	<b>CAN_Low (dominant LOW)</b>
Blue	IGN	Digital input
Green	DiWu	Digital input
Red	VCC (2A fuse-protected)	Input voltage (+10.8...35.0V DC)
Brown	GND	-

In order to get specific information from a CAN bus, e.g. RPM information, as trigger or control signal, this information must be extracted from the CAN bus data stream using CAN message identifiers.

Using PFAL commands provided for CAN applications, the user defines the CAN communication baudrate of the CAN Bus in the vehicle and provides a list of CAN message identifiers (*up to 25 messages identifiers currently available*) that should be received by the CAN interface. When an identifier match is detected, the message is copied into the associated receive buffer. To find out states that an identifier provides (*e.g. when the doors are locked or opened*), the user have to provide the position of bits and bytes to be read out of the 8-byte data. The read out values are then automatically stored into different storage slots inside the device and when a storage slot changes its value the corresponding event is occurred. These events can be used to send out these values to a TCP server for further evaluation. On the remote server the received data may be graphically displayed to show e.g. vehicle diagnostics, Ignition, Door locks, Windows state etc.

*In the table below are given some configuration settings to demonstrate how your STEPPIII or FOX device can be configured to get out information from a Low speed CAN bus and to send it to a remote server. For High speed CAN application, just replace the entry **"std"** in the **"\$PFAL,Sys.CAN.Msg.Add,std,xxx"** and **"\$PFAL,Sys.Can.Var.Add,0,number,event,std,xxx,x,x,x,xxx"** by **"ext"**.*

**How to add the required message identifiers, read out their data and send values to a remote server when they change?**

Command syntax	<b>\$PFAL, Sys.Can.Enable, &lt;baudrate&gt;, &lt;mode&gt;</b>
Description	STEPPIII and FOX devices use the command above to activate the <b>CAN</b> interface. <b>CAN</b> interface will be enabled after rebooting the system.
Command syntax	<b>\$PFAL, Sys.CAN.Msg.Add, &lt;type&gt;, &lt;identifier&gt;[, &lt;mask&gt;]</b>
Description	<p>STEPPIII and FOX devices use the command above to add a CAN message identifier into the buffer that should be received by the CAN interface. The <i>CAN-Bus controller</i> built-in the device automatically scans every incoming CAN message from the bus and when there is an identifier match, the message is copied into the associated receive buffer. To read the data stored in this buffer identifier use the command "<b>\$PFAL, Sys.CAN.Var.Add...</b>". The <i>&lt;mask&gt;</i> entry is optional and can be used when you don't know exactly the message identifier, otherwise leave it empty (if used, please refer to the examples "<b>How to use &lt;mask&gt; in this command</b>"). In all examples in this table the <i>&lt;mask&gt;</i> entry is not used.</p> <p><b>Hint:</b> If you want to read 10 different message identifiers (e.g. door lock, gear direction, vehicle speed, RPM etc.) you have to execute this command 10 times with corresponding identifier. If a message identifier provides 2 different information (e.g. door lock, door state) and you need both information, then first execute this command just one time and then execute the command "<b>\$PFAL, Sys.CAN.Var.Add...</b>" 2 times by defining the same <i>&lt;msg_identifier&gt;</i> and different byte and bit order (see example with "ID=39F" below).</p> <p><b>How to use &lt;mask&gt; in this command:</b></p> <p><b>Example 1 - for standard CAN:</b></p> <ul style="list-style-type: none"> <li>- Let's assume that following message identifiers are on the CAN Bus data stream: A: id=19A; B: id=290; C: id=39E; D: d=89F; E: id=6F9; F: d=19F; G: d=392;</li> <li>- The PFAL command below with "id=39B" and "mask=FFFFFFF0" <b>\$PFAL, Sys.CAN.Msg.Add, std, 39B, FFFFFFF0</b> // receives all message identifiers on the CAN bus (in this example all 3-bytes messages) starting with ID "39" (i.e. 390 to 39F) and filters out all other messages.</li> <li>- messages C and G would be received, because they start with "39" and the last 4 bits are don't care,</li> <li>- all other messages A, B, D, E and F would be filtered out because they don't start with "39" (the first 2 digits in these message IDs do not match the required "39").</li> </ul> <p><b>Example 2 - for extended CAN:</b></p> <ul style="list-style-type: none"> <li>- The PFAL command below with "id=00FEF1" and "mask=FFFFFFF0" <b>\$PFAL, Sys.CAN.Msg.Add, ext, 00FEF1, FFFFFFF0</b> // receives all message identifiers on the CAN bus (in this example all 6-bytes messages) starting with "00FE" (i.e. "00FE00" to "00FEFF") and filters out all other messages.</li> </ul>
Command syntax	<b>\$PFAL, Sys.CAN.Var.Add, &lt;variable_slot&gt;, &lt;variable_type&gt;, &lt;notification&gt;, &lt;msg_type&gt;, &lt;msg_identifier&gt;, &lt;start_byte&gt;, &lt;start_bit&gt;, &lt;stop_byte&gt;, &lt;stop_bit&gt;, &lt;byte_order&gt;</b>
Description	STEPPIII and FOX devices use the command above to read out specific data attached to a CAN message identifier (e.g. 211 provides information about the door lock). The <i>&lt;byte_order&gt;</i> defines how the data bytes should be read, <b>MSB</b> (the most significant byte) is always on the left and <b>LSB</b> (the least significant byte) on the right.

**Let's see an example how to configure your device to read the data out of a standard CAN bus :**

Let's suppose you want to read the data attached to the following identifiers in a standard CAN message (11-bits) and then send this data out to a remote server when their value changes:

<b>Identifiers</b>	<b>Data added to it</b>
<b>211</b>	and e.g. <b>byte 0 (MSB)</b> provides information about the door lock.
<b>39F</b>	and e.g. <b>byte 0 (MSB)</b> provides information about the gear direction.
<b>39F</b>	and e.g. <b>bytes 1 and 2 (LSB)</b> provide information about the vehicle speed.
<b>15B</b>	and e.g. <b>bytes 1 and 2 (LSB)</b> provide information about the RPM.
<b>479</b>	and e.g. <b>bytes 6 and 5 (MSB)</b> provide information about the door state.
<b>65A</b>	and e.g. <b>bytes 1, 2 and 3 (LSB)</b> provide information about the milage.

**Steps to be done:**

- 1) - First, activate the CAN interface and define the baudrate the CAN bus uses (e.g. **\$PFAL, Sys.Can.Enable, 100K, RO**)  
// by default the baudrate is set to **100K** (for Low-Speed CAN bus option) and **250K** (for High Speed CAN Bus option).
- 2) - Thereafter, add a message ID into the associated buffer (e.g. **\$PFAL, Sys.CAN.Msg.Add, std, 211**) //std=standard CAN;  
ext=extended CAN;
- 3) - Read out the data attached to the message identifier "211" by specifying bits, bytes and byte order containing the required data (e.g. **\$PFAL, Sys.Can.Var.Add, 0, number, event, std, 211, 0, 0, 0, 7, MSB**)
- 4) - Finally, configure an alarm that sends out the contents of the *Slot0* via TCP when its contents changes (door lock changes its value) (e.g. **\$PFAL, CNF.Set, AL45=SYS.Can.e0:TCP.Client.Send, 8, "<sfal.event.text text='doorlock change to &(CAN0)'>"**)
- 5) - Follow the steps 2, 3 and 4 to add other message identifiers, read out their data and send out these values out when they change.

For more information about the PFAL commands added in this application note, refer to the manual "**steppIII\_fox\_bolero\_it\_PFAL\_Configuration\_Command\_Set.pdf**".

Below you will find some examples how to read the data added to some message identifiers using PFAL commands. The red marked bits in the examples below are the bits which will be read from the data that the message identifier provides.

**How to add the required message identifiers, read out their data and send values to a remote server when they change?****\$PFAL, Sys.CAN.Msg.Add, std, 211****\$PFAL, Sys.Can.Var.Add, 0, number, event, std, 211, 0, 0, 7, MSB**

First command adds a standard message identifier "211" into the associated receive buffer and second command stores the value (e.g. door lock state) into the **slot 0** read out of **byte 0** of the 8-bytes datastream starting from the MSB (most significant byte). Whenever the value in the **slot 0** changes, the corresponding event is occurred. This event enables you to capture and send out these values via TCP.

Some automotive manufacturers organise their signal data within the data bytes to be read in different directions. That's way, the entries **MSB** or **LSB** at the end of the command "**Sys.Can.Var.Add**" defines which byte in the 8-bytes datastream should be read first. Therefore, if you set **MSB**, the data will be read from left to right, while if you set **LSB**, the data will be read from right to left as represented in table below. If the reading direction does not match with the direction given by the automotive manufacturer you will get a wrong value which does not correspond to the value that you will have to read.

This example is represented in table form below.

	Identifier	Data							
	11 bit	0 to 7 bytes (represented in bitwise)							
		byte 7	byte 6	byte 5	byte 4	byte 3	byte 2	byte 1	byte 0 (←LSB)
		(MSB→) byte 0	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7
Example	<b>211</b>	<b>11110011</b>	10100	11111	10011001	1110101	11110001	11110010	11110101

(→ ←) The arrow direction indicates reading direction of bytes.

**\$PFAL, Sys.CAN.Msg.Add, std, 39F****\$PFAL, Sys.Can.Var.Add, 1, number, event, std, 39F, 0, 0, 7, MSB**

First command adds a standard message identifier "39F" into the associated receive buffer and second command stores the value (e.g. gear direction) into the **slot 1** read out of **byte 0** of the 8-bytes datastream starting from the MSB (most significant byte).

This example is represented in table form below.

	Identifier	Data							
	11 bit	0 to 7 bytes (represented in bitwise)							
		byte 7	byte 6	byte 5	byte 4	byte 3	byte 2	byte 1	byte 0 (←LSB)
		(MSB→) byte 0	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7
Example	<b>39F</b>	<b>010111</b>	111101	11111	1011101	10111	1001110	1001100	10100011

(→ ←) The arrow direction indicates reading direction of bytes.

**\$PFAL, Sys.Can.Var.Add, 2, number, state, std, 39F, 1, 0, 2, 7, LSB**

This command stores the value (e.g. Speed values) into the **slot 2** read out of **bytes 1 and 2** of the 8-bytes datastream starting from the LSB (last significant byte).

This example is represented in table form below.

	Identifier	Data							
	11 bit	0 to 7 bytes (represented in bitwise)							
		byte 7	byte 6	byte 5	byte 4	byte 3	byte 2	byte 1	byte 0 (←LSB)
		(MSB→) byte 0	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7
Example	<b>39F</b>	10010111	11101	10001	11011101	1010111	<b>10010111</b>	<b>10011110</b>	10101011

(→ ←) The arrow direction indicates reading direction of bytes.

**\$PFAL, Sys.CAN.Msg.Add, std, 15B****\$PFAL, Sys.Can.Var.Add, 3, number, event, std, 15B, 1, 4, 2, 3, LSB**

First command adds a standard message identifier "15B" into the associated receive buffer and second command stores the value (e.g. RPM) into the **slot 3** read out of **bits 4 - 7 of byte 1** and **bits 0 - 3 of byte 2** of the 8-bytes datastream starting from the LSB (last significant byte). This example is represented in table form below.

	Identifier	Data							
	11 bit	0 to 7 bytes (represented in bitwise)							
		byte 7	byte 6	byte 5	byte 4	byte 3	byte 2	byte 1	byte 0 (←LSB)
		(MSB→) byte 0	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7
Example	<b>15B</b>	10010111	11101	10001	11011101	1010111	1001 <b>0111</b>	<b>1001</b> 1110	10101011

(→ ←) The arrow direction indicates reading direction of bytes.

**How to add the required message identifiers, read out their data and send values to a remote server when they change?**

**\$PFAL, Sys.CAN.Msg.Add,std,479**  
**\$PFAL, Sys.Can.Var.Add,4,number,event,std,479,1,3,2,2,MSB**

First command adds a standard message identifier "479" into the associated receive buffer and second command stores the value (e.g. door state) into the *slot 3* read out of *bits 3 - 7 of byte 1* and *bits 0 - 2 of byte 2* of the 8-bytes datastream starting from the MSB (most significant byte). In this example bits of bytes 6 and 5 will be read.

This example is represented in table form below.

	Identifier	Data							
	11 bit	0 to 7 bytes (represented in bitwise)							
		byte 7	byte 6	byte 5	byte 4	byte 3	byte 2	byte 1	byte 0 (←LSB)
		(MSB→) byte 0	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7
Example	<b>479</b>	10100111	<b>11011</b> 100	<b>10111</b>	11101	1110001	10111111	11111110	11100001

(→ ←) The arrow direction indicates reading direction of bytes.

**\$PFAL, Sys.CAN.Msg.Add,std,65A**  
**\$PFAL, Sys.Can.Var.Add,5,number,state,std,65A,1,0,3,7,LSB**

First command adds a standard message identifier "65A" into the associated receive buffer and second command stores the value (e.g. milage) into the *slot 3* read out of *bytes 1, 2 and 3* of the 8-bytes datastream starting from the LSB (last significant byte).

This example is represented in table form below.

	Identifier	Data							
	11 bit	0 to 7 bytes (represented in bitwise)							
		byte 7	byte 6	byte 5	byte 4	byte 3	byte 2	byte 1	byte 0 (←LSB)
		(MSB→) byte 0	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7
Example	<b>65A</b>	10010111	11101	10001	11011101	<b>1010111</b>	<b>10010111</b>	<b>10011110</b>	10101011

(→ ←) The arrow direction indicates reading direction of bytes.

**\$PFAL,CNF.Set,AL45=SYS.Can.e0:TCP.Client.Send,8,"<sfal.event.text text='doorlock changed to &(CAN0)'>"**  
**\$PFAL,CNF.Set,AL46=SYS.Can.e4:TCP.Client.Send,8,"<sfal.event.text text='doorstate changed to &(CAN4)'>"**  
**\$PFAL,CNF.Set,AL47=SYS.Can.e1:TCP.Client.Send,8,"<sfal.event.text text='gearstate changed to &(CAN1)'>"**

Alarm 45 reports an RMC protocol and the CAN value from the variable slot 0 to the TCP server whenever this value changes.

Alarm 46 reports an RMC protocol and the CAN value from the variable slot 4 to the TCP server whenever this value changes.

Alarm 47 reports an RMC protocol and the CAN value from the variable slot 1 to the TCP server whenever this value changes.

**\$PFAL,CNF.Set,AL48=SYS.Can.e3>1&SYS.TRIGGER.s\_TRIP=low:SYS.TRIGGER\_TRIP=high&TCP.Client.Send,8,"<sfal.event.trips tart>"**

**\$PFAL,CNF.Set,AL49=SYS.Can.e3=0&SYS.TRIGGER.s\_TRIP=high:SYS.TRIGGER\_TRIP=low&TCP.Client.Send,8,"<sfal.event.trips top dist='&(NavDist)'>"&TCP.Client.Send,8,"<sfal.event.text text='milage = &(CAN5)'>"**

**\$PFAL,CNF.Set,AL50=SYS.TIMER.e\_1SEC:MSG.Send.Serial,0,"SERIALCAN Speed=&(CAN2) kmh RPM=&(CAN3) u/min tacho=&(CAN5) km"**

Alarm 48 reports the CAN value from the variable slot 3 to the TCP server whenever this value is greater than 1 and trigger *s\_TRIP* is low.

Alarm 49 reports the CAN value from the variable slot 3 to the TCP server whenever this value is 0 and trigger *s\_TRIP* is high.

Alarm 50 reports the CAN value from the variable slots 2 and 3 to the serial line every 1 second.

**<sfal.event...> commands are supported only from our Trace4You server.**

doorstate changed to 0  
doorstate changed to 1  
gearstate changed to 0  
gearstate changed to 2  
gearstate changed to 1  
doorstate changed to 8  
doorstate changed to 9  
doorstate changed to 2  
doorstate changed to 5  
doorstate changed to 3  
doorstate changed to 4  
doorstate changed to 60  
doorlock changed to 8  
milage = 46940

**How to add the required message identifiers, read out their data and send values to a remote server when they change?**

milage = 46957  
milage = 47030  
milage = 47046  
milage = 47056  
milage = 47065  
milage = 47070

The values above (**doorlock, door state and milage**) are taken out of the **Trace4You** server database the STEPPIII device has reported to server, based on the alarm configuration of **AL45, AL46** and **AL49**.